

English Guide
Part Names

- The numbers shown in the ➡ symbols are the page numbers where part functions and/or use are explained in Japanese.

Front view

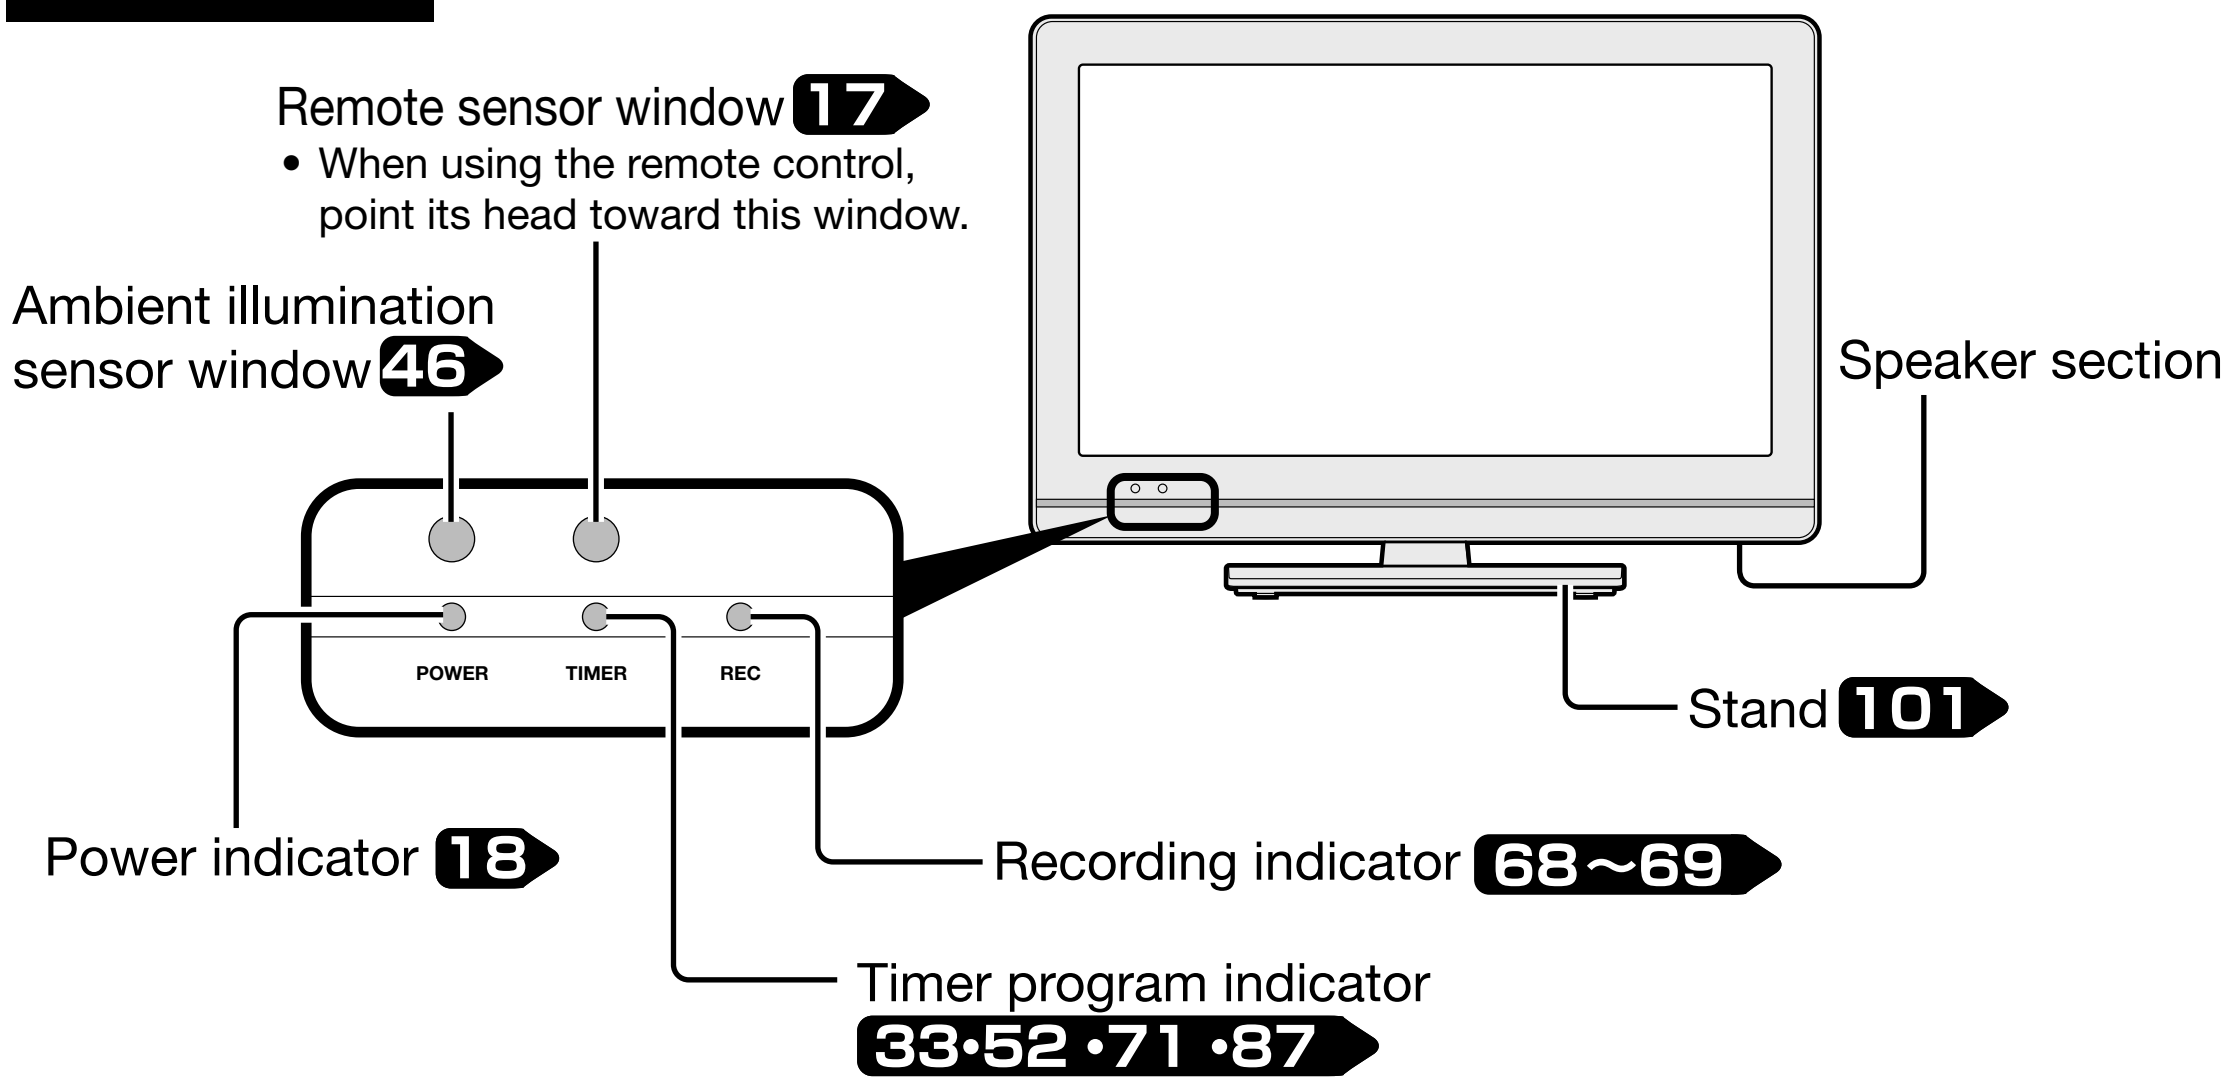


Left side view

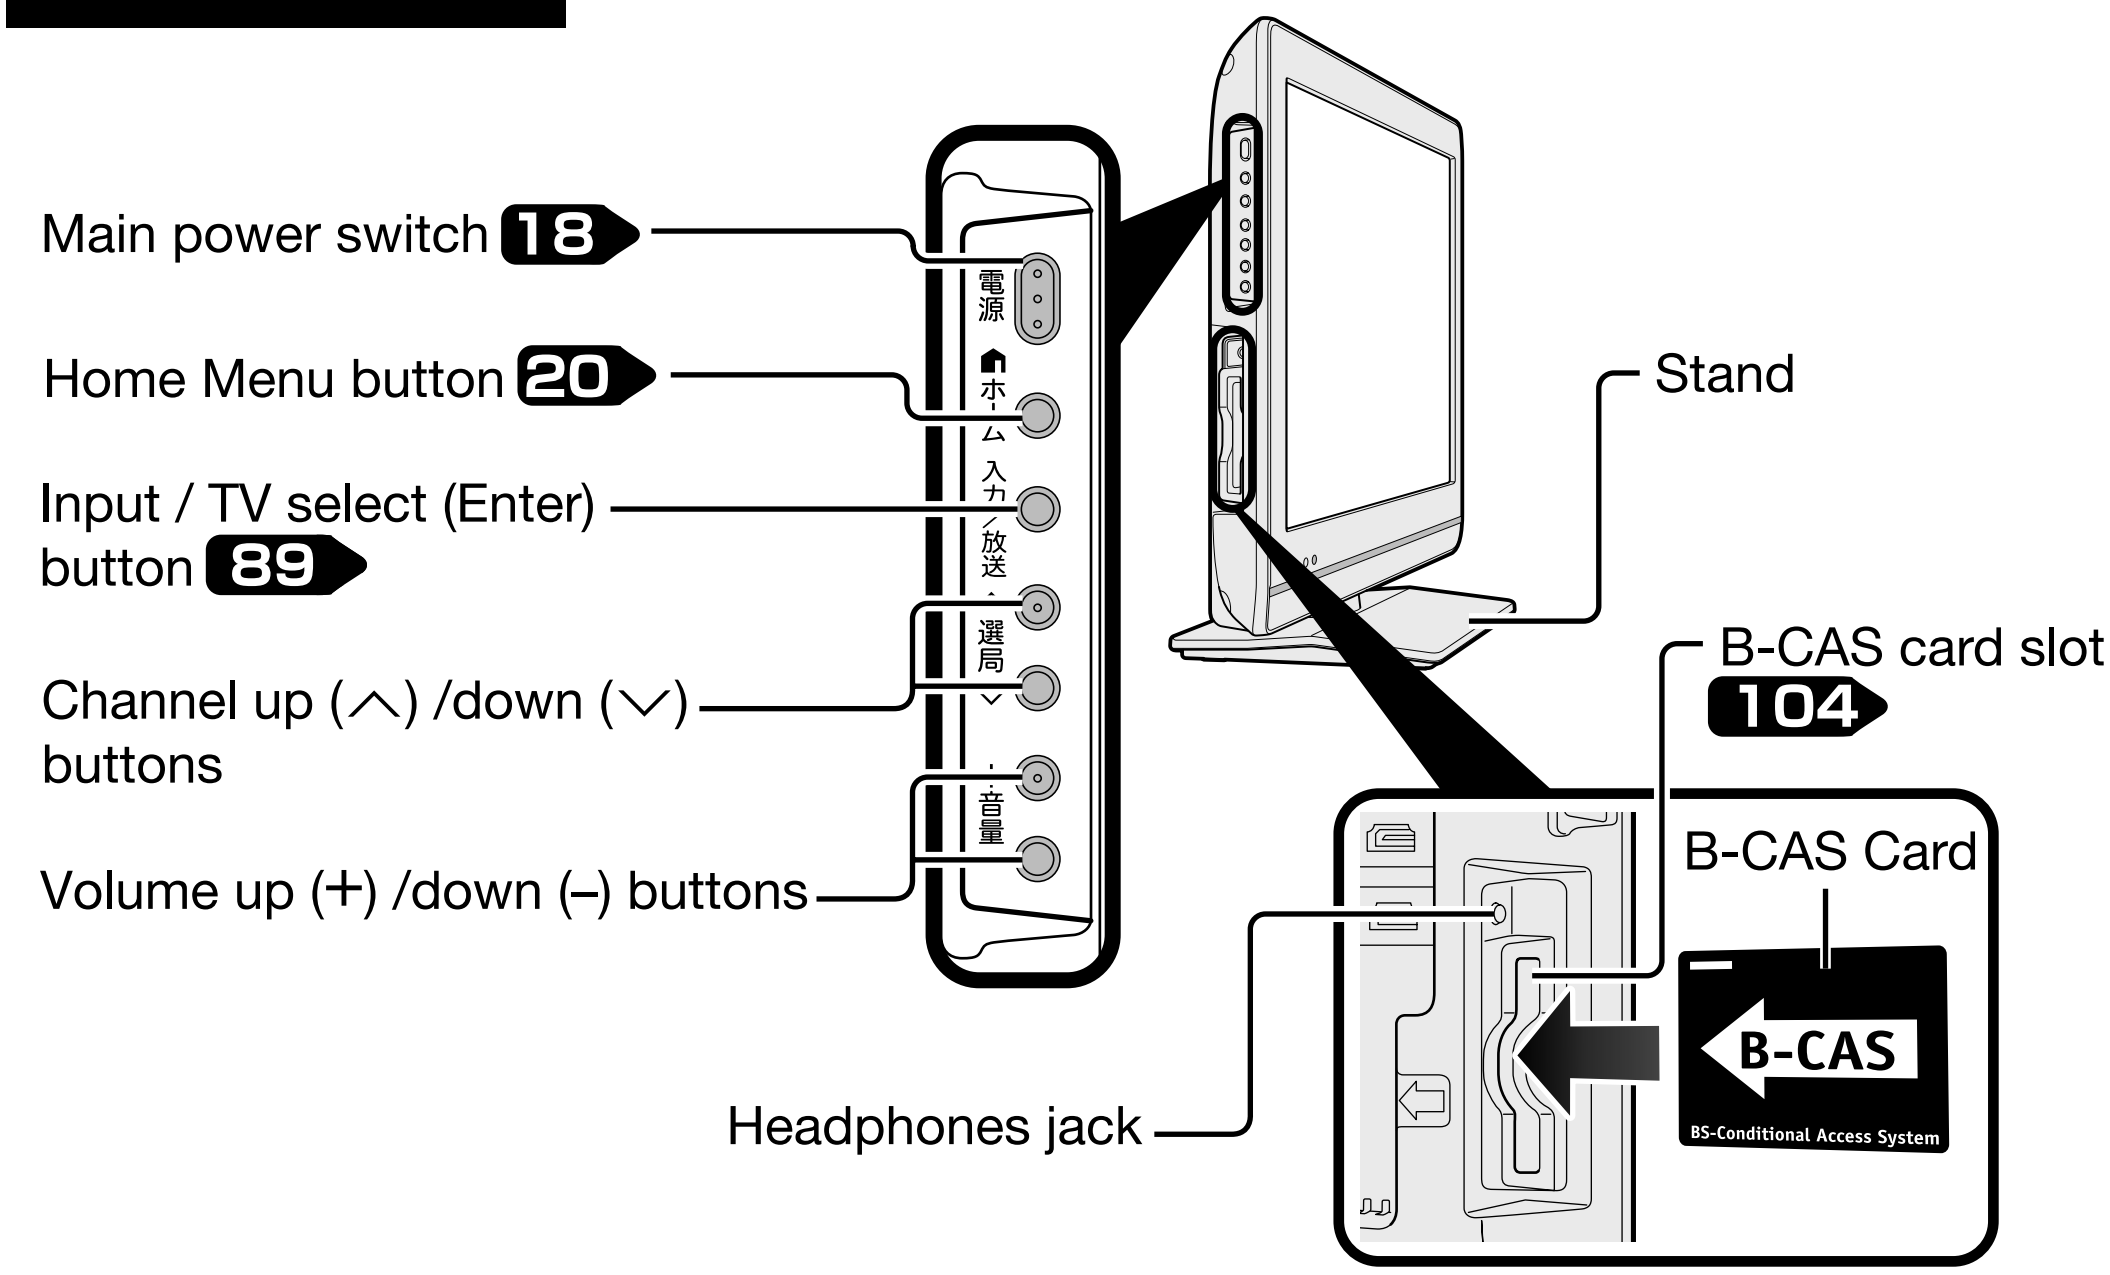

- IC chip side of B-CAS card is turned to a front side of this product, and B-CAS card is inserted.

Back view


The illustrations below are those of LC-19K7.
LC-24K7/LC-22K7 has the same layout of jacks and terminals as LC-19K7.

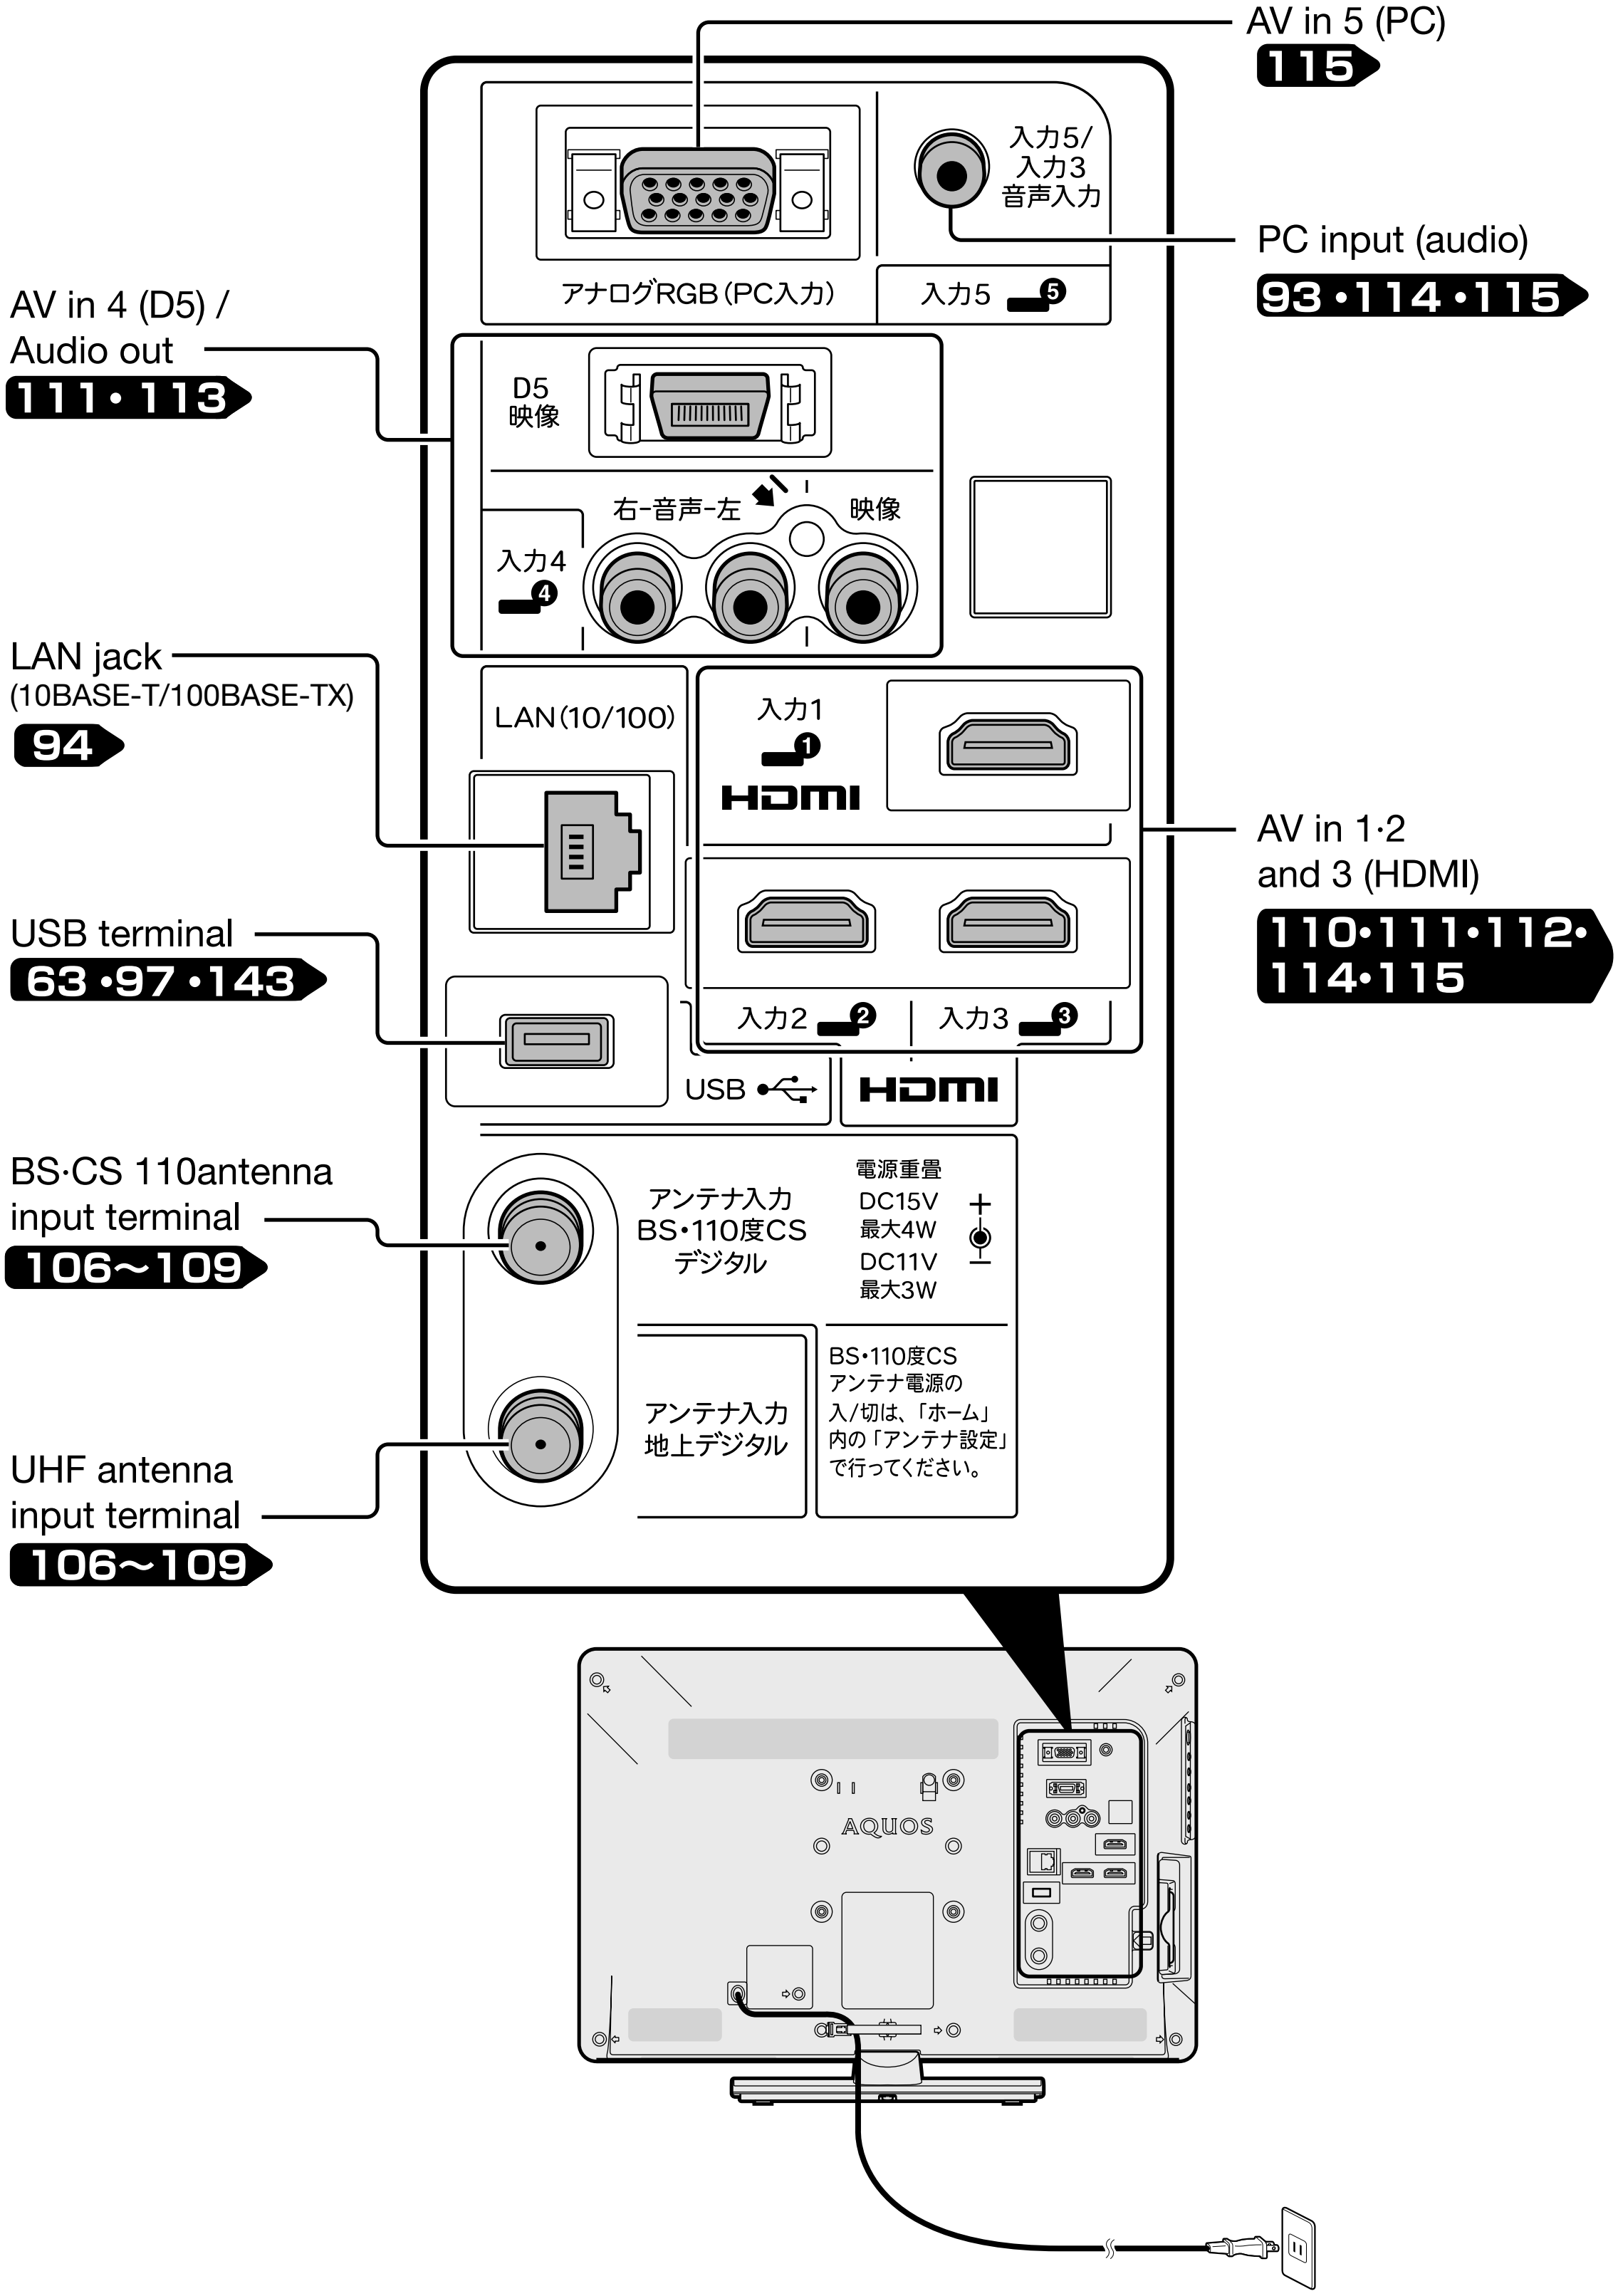

Continued on the next page

Remote Control Unit

See Page **22** for how to select a program.

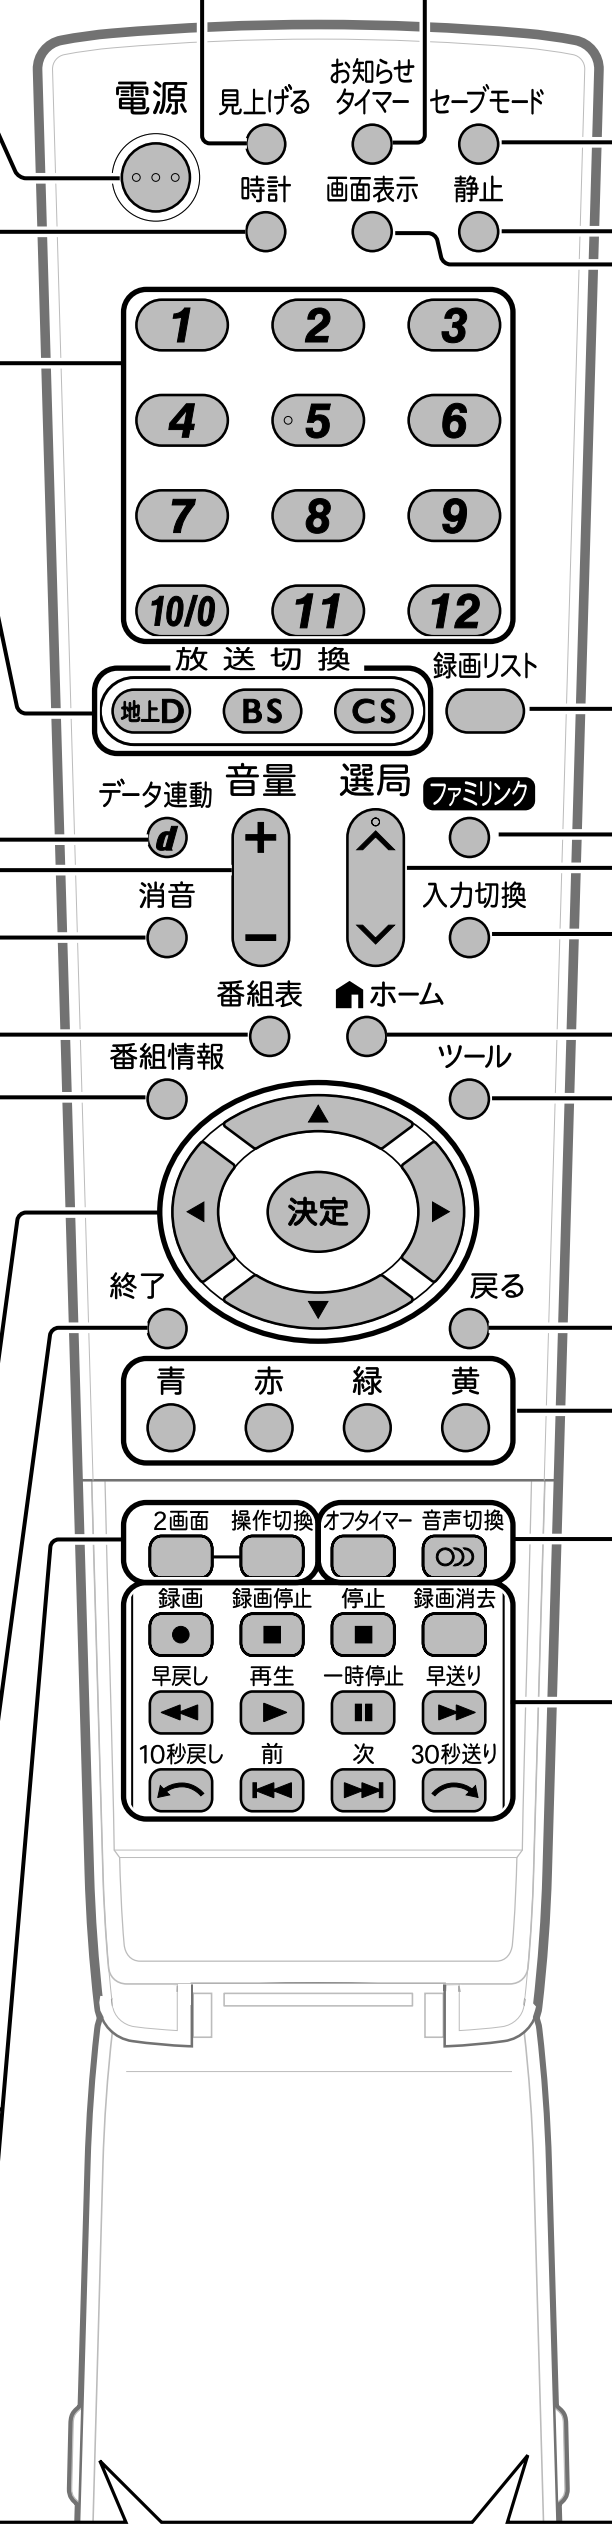

View angle 37
- Press to adjust the display angle when viewing from a position lower than the TV itself.

Active/Standby 18
- Press to engage the TV set in the active or standby mode.

Clock 37
- Press to display a large clock on the screen while watching.

Channel select 22
- Press to select a channel.
- Use to input a number for various settings.

Terrestrial digital/BS/CS 22
- Select the CS digital channel for the first time. 23

Linked data broadcast 24

Volume up (+)/down (–) 22
- Press to adjust the volume.

Mute 22
- Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

EPG 27
- Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.
- Select a future program in EPG to set a timer program.

Program info 40
- Press to display detailed information on the current digital program.

Cursor (up, down, left, right) / Enter/Confirm 21

Finish
- Press to finish menu operation, etc.
  * This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

2画面 **Split screen** 34
- Press to switch between the split screen mode and the normal screen mode.

操作切換 **Operable screen** 36
- Press to switch the operable screen when the TV set is in the split screen mode.

Timer 54
- Press to set wake up timer.

SAVE mode 57

Freeze 36

Display 40

Recording list 77 • 88
- Press to display a list of programs recorded onto a USB HDD or AQUOS recorder.

Familink 66 • 84
- Press to operate "Familink" Recorders connected via HDMI cables.

Channel up (∧)/down (∨) 22
- Press to select channels in the ascending or descending order.

Input select 89 • 92

Display the "Home" Menu 21

Display the Tool Menu 21


Return

Color 23 • 24 • 28 • 60~61 • 74~75 • 76~81 • 86 • 88 • 97~98
- Use to operate EPGs and data program screens.

オフタイマー **Sleep timer** 50

音声切換 **Audio select** 38

Recording/Playback operation
- **Recording operation**
  Press to record onto USB HDD or AQUOS recorder.
  68~69 • 81 • 86
- **Playback operation**
  Press to play a program recorded onto a USB HDD or AQUOS recorder.
  77 • 78 • 88

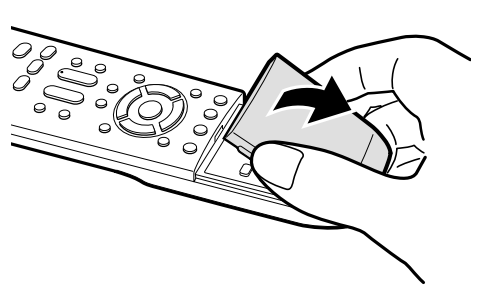


To open the cover

Hold the cover by the projections on both sides and lift upwards.

Switching the Display Language to English
ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.
  ホームメニューなどの画面表示を英語にすることができます。

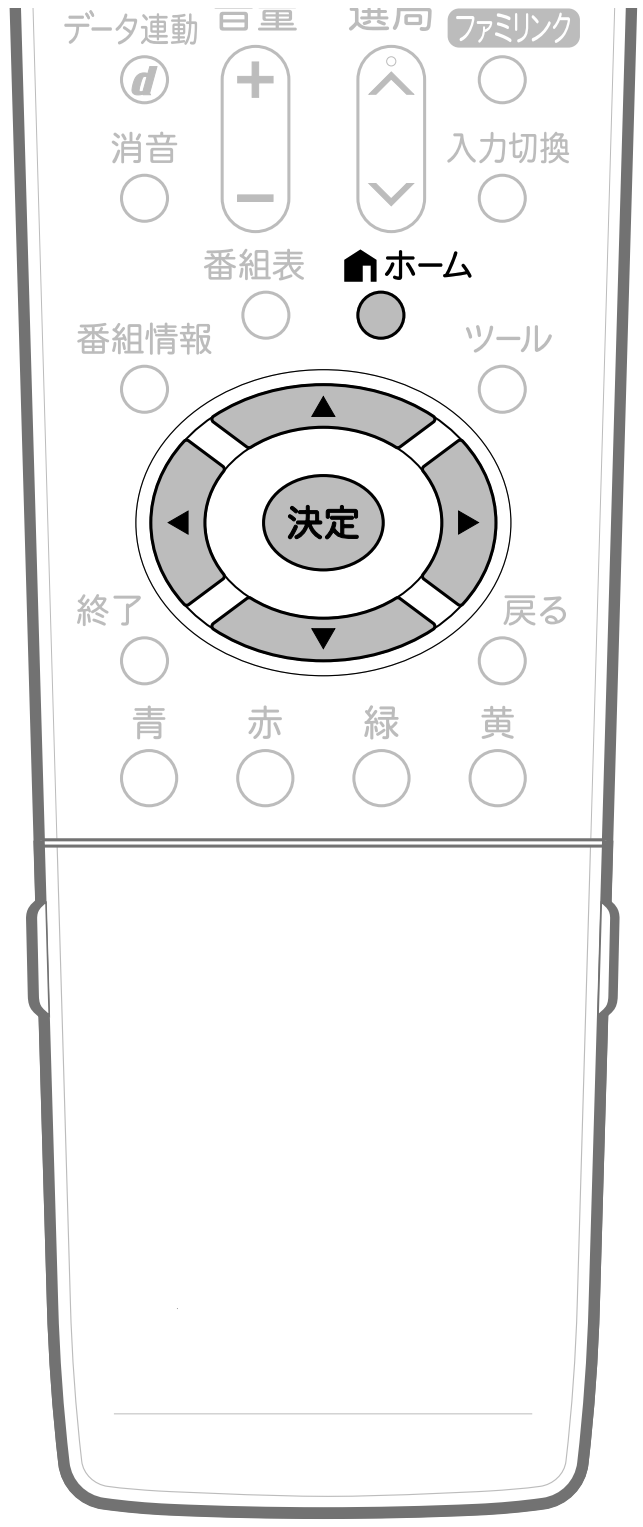

1 Press ホーム and select with

Select“設定”(Setup) on the Home menu.
ホームメニューから「設定」を選ぶ




2 Select with

Select“(視聴準備)”(View Setting).
「(視聴準備)」を選ぶ



3 Select with Press 決定


Select “Language(言語)”.
「Language(言語)」を選ぶ

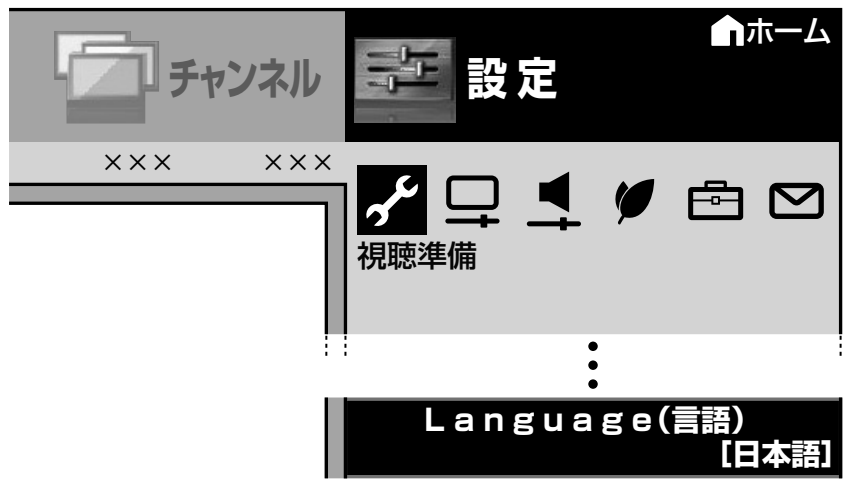

4 Select with Press 決定

Select “English”.
「English」を選ぶ

Enter.
決定する

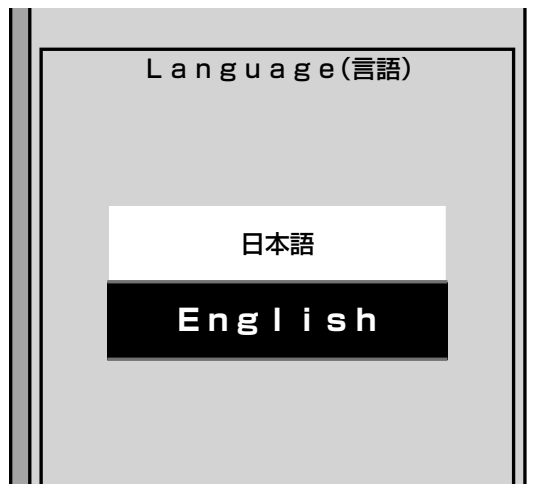

- The menu screen is now displayed in English.
- 画面表示が英語になります。

5 Press ホーム

Finish this operation.
終了する

◇おしらせ◇

誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」－「(View Setting)」－「言語(Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。